

1.0

Choose menu from main screen.




1.1

Press F1 to choose adjust function.




1.2

Use arrow buttons to navigate to crane parameters section.

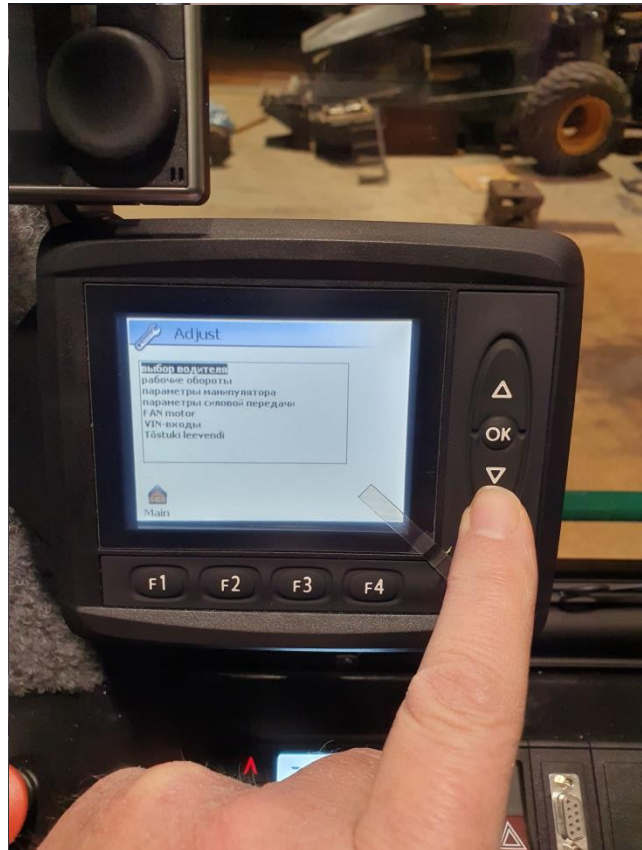

1.3

Select OK.

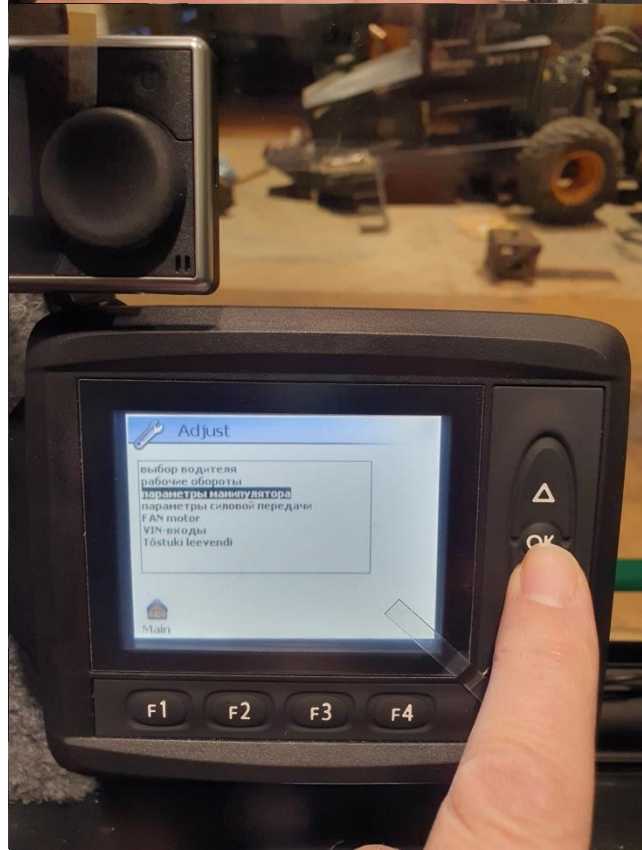

1.4

Activate crane.




1.5

Choose the crane function You want to adjust by using the function on the machine. In this sample the extension function is selected.



1.6

The function screen appears.

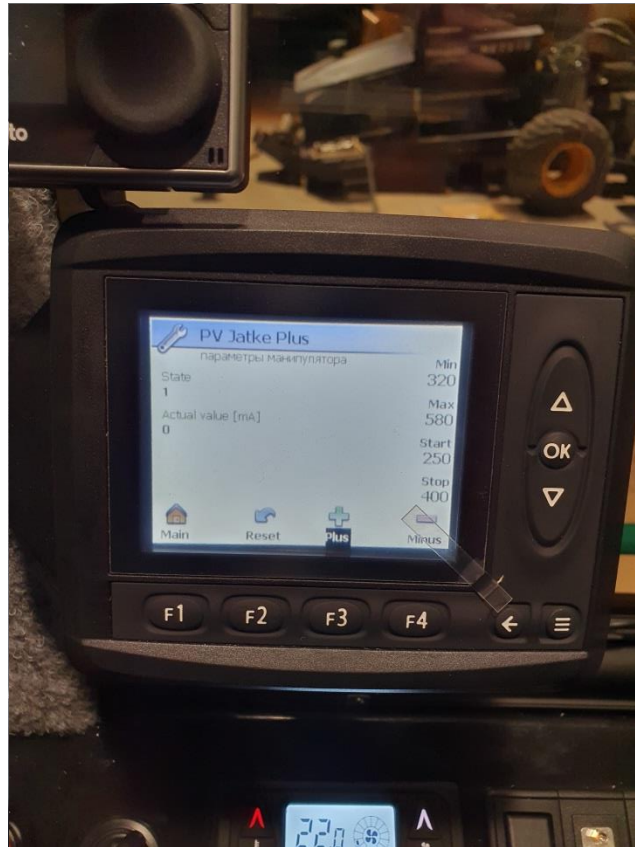

1.7

You can change between „+“ and „-“ with F3 and F3 buttons. Select OK.




1.8

The function adjusting screen appears.



1.9

You can adjust the values with the function controller on the machine.

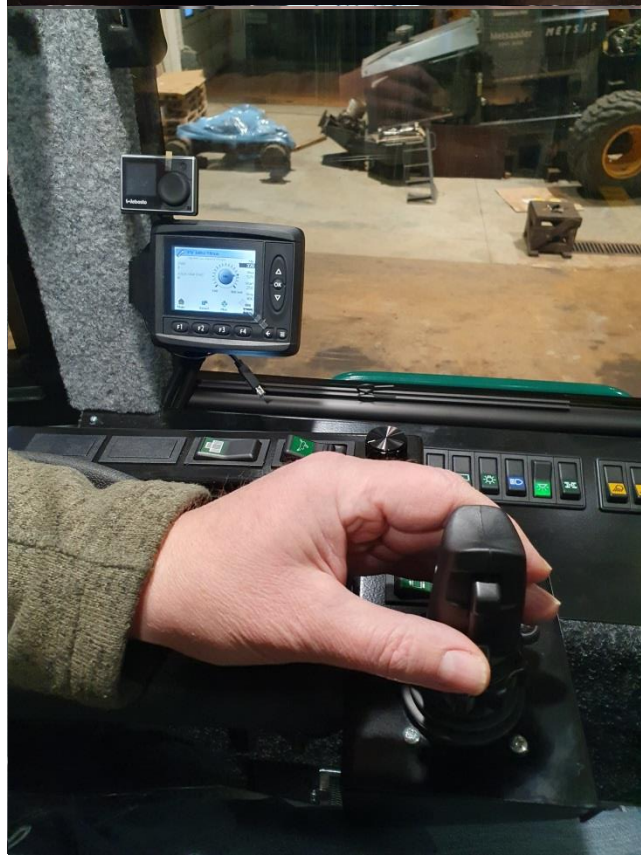


1.10

Select OK to accept value and move to next value.



1.11

Move to next value.

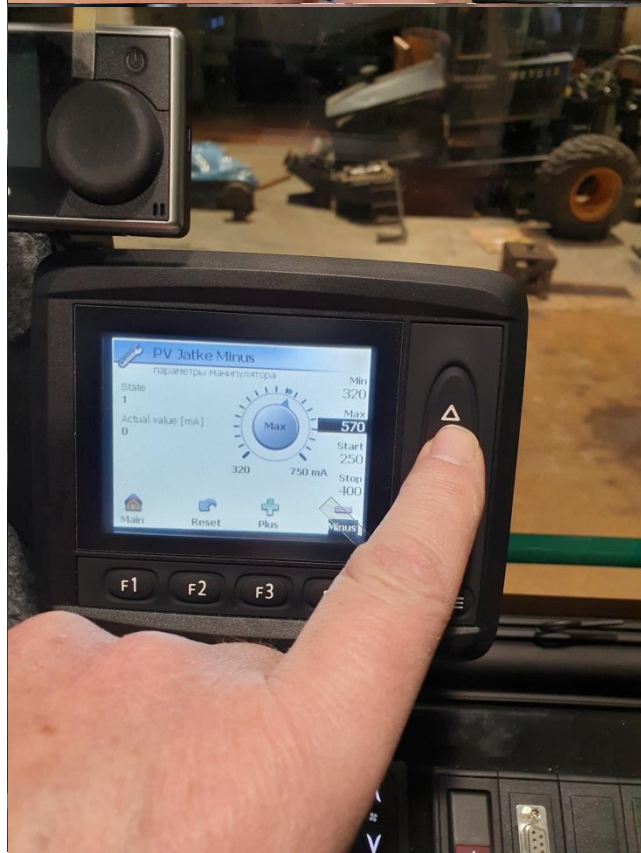

1.12

Adjust the value.



1.13

Select OK.



1.14

Adjust corresponding values.



1.15

Adjust corresponding values.



1.16

Follow steps 1.5 to 1.15 to change needed crane function values. After changes are done, return to main screen with Menu button.

