


1.

Choose MENU - ADJUST -
TRANSMISSION PARAMETERS

2.


Choose COUT-pumppu

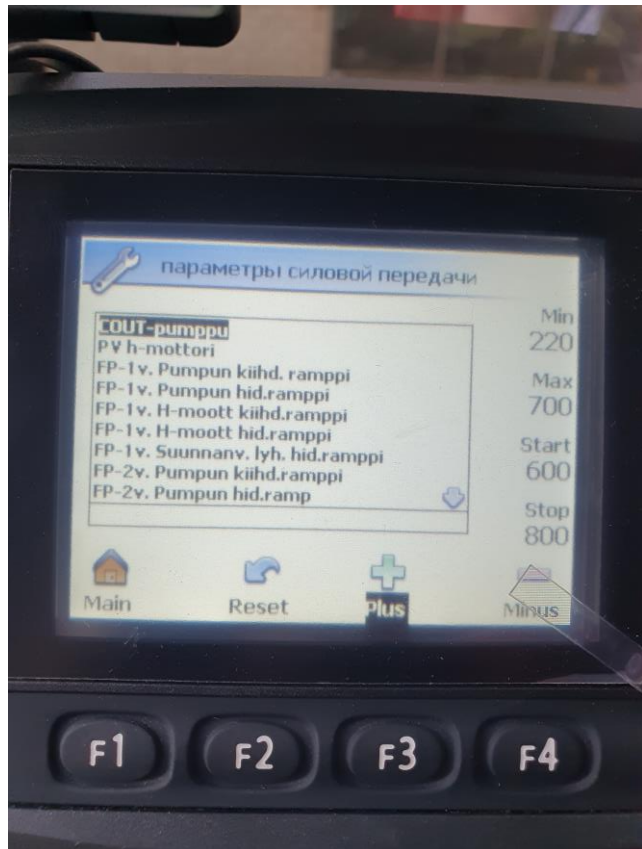

2.1

Press F3 to choose Plus

Use arrows on the side of the
screen and set the parameters of
COUT-pumppu Plus according to
the picture.

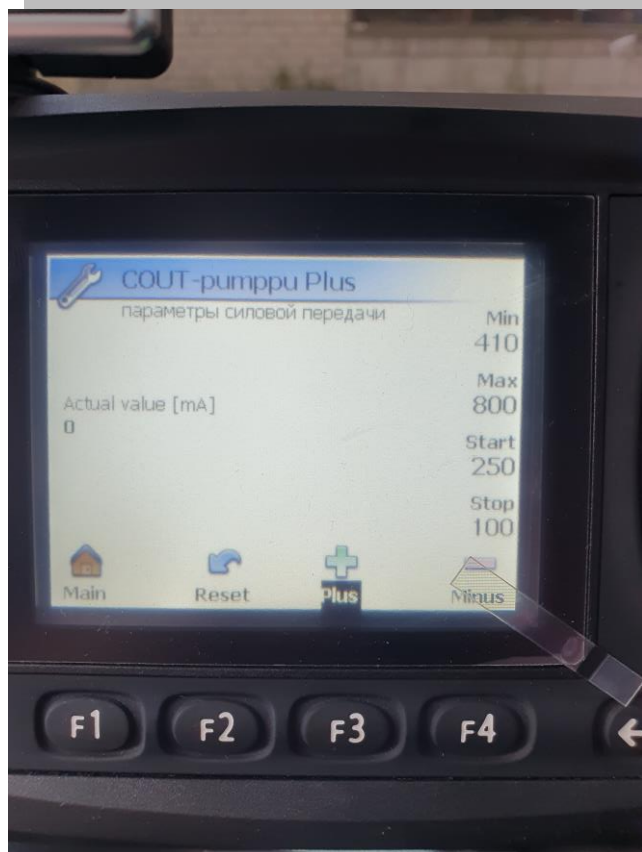

2.2

Press F4 to choose Minus

Use arrows on the side of the screen and set the parameters of COUT-pumppu Minus according to the picture.



3.

Choose PV h-mottori



2.2


Press F3 to choose Plus (There is no Minus for motor)

Use arrows on the side of the screen and set the parameters of PV h-mottori Plus according to the picture.



3.

Choose FP-1v. Pumpun kiihd. ramppi

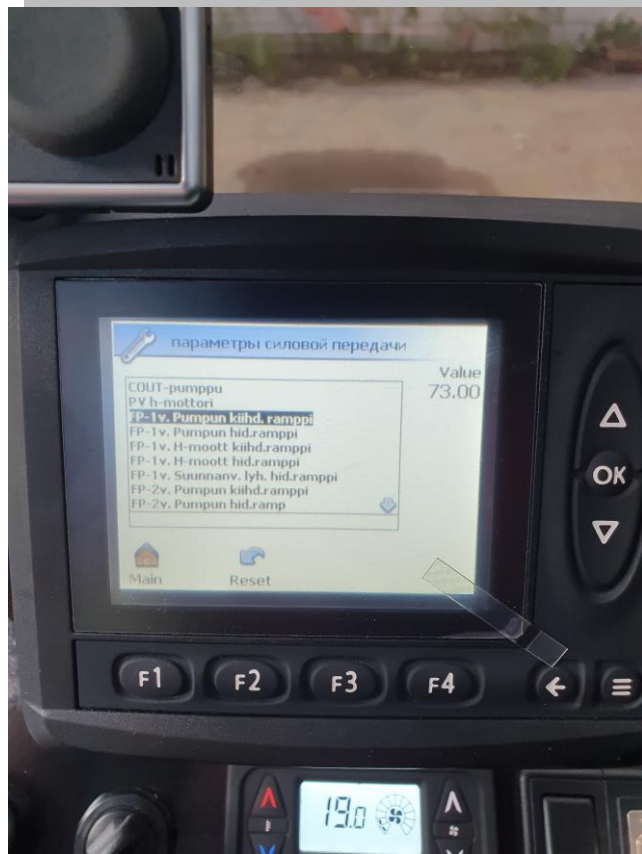

3.1

Use arrow buttons to adjust the value according to the picture.



4.

Choose *FP-1v. Pumpun hid.ramppi*




4.1

Use arrow buttons to adjust the value according to the picture.



4.

Choose *FP-1v. H-moott kiihd.ramppi*

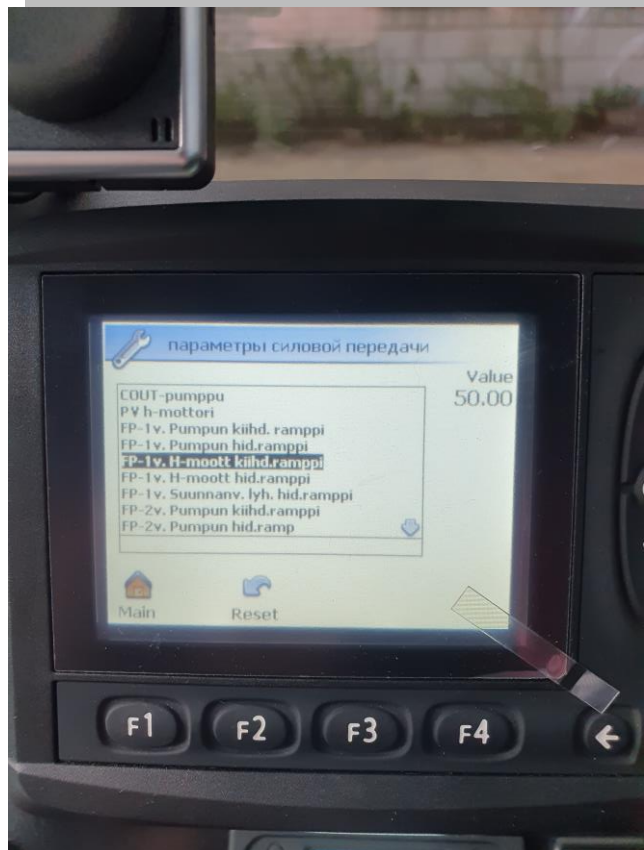


4.1

Use arrow buttons to adjust the value according to the picture.



5.

Choose *FP-1v. H-moott hid.ramppi*

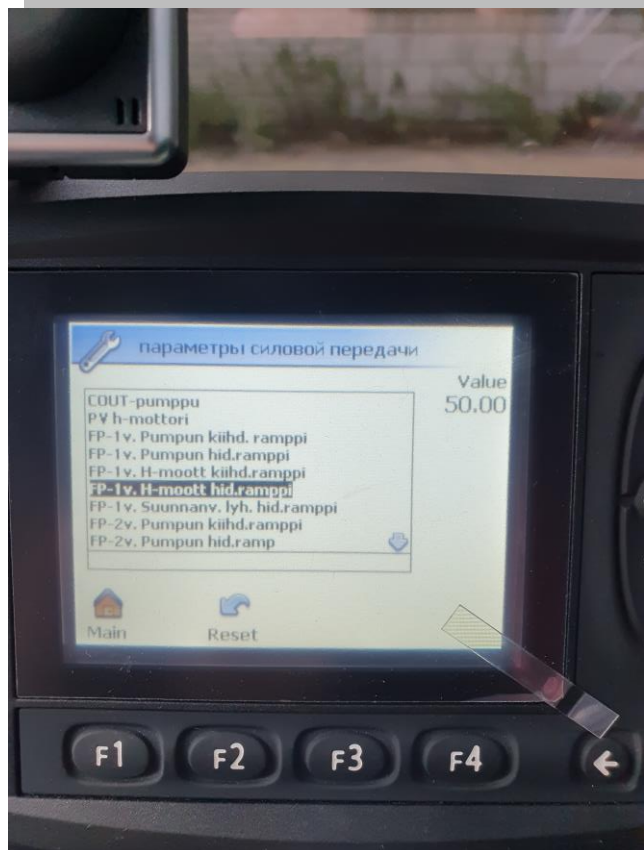

5.1

Use arrow buttons to adjust the value according to the picture.



6.

Choose FP-2v. Pumpun kiihd.ramppi



6.1

Use arrow buttons to adjust the value according to the picture.



7.

Choose FP-2v. Pumpun hid.ramp




7.1

Use arrow buttons to adjust the value according to the picture.



8.

Choose FP-Kaasun vaimennus

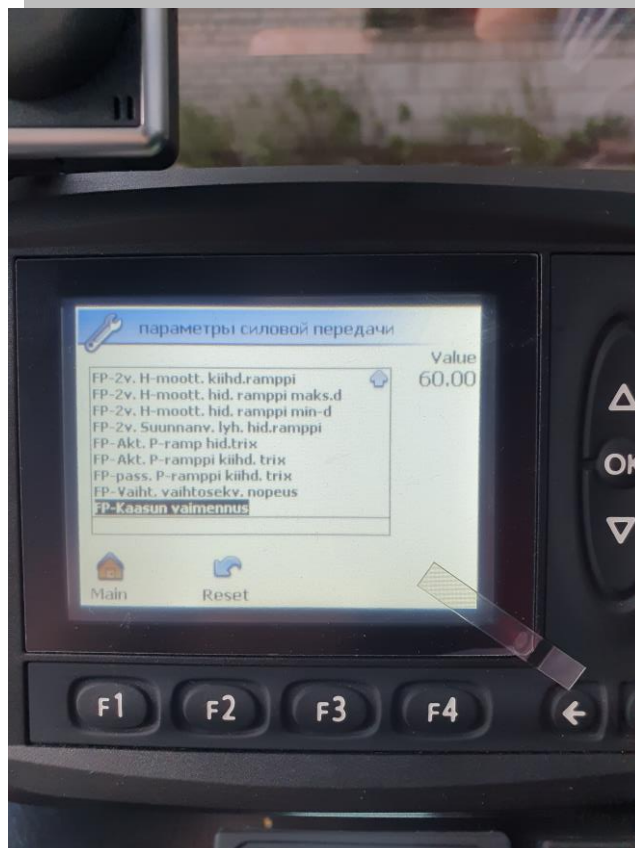

8.1

Use arrow buttons to adjust the value according to the picture.



9.

Go back to ADJUST and choose VIN-Inputs



10.

*Choose VIN-Kaasupoljin eteen
(Front gas pedal)*



10.1

*Use arrow buttons to regulate
Min so that actual value shows
around -4%*



10.2

Press down front gas pedal and use arrow buttons to regulate Max so that actual value shows around -100%



11.

Choose VIN-Kaasupoljin taakse (rear gas pedal) and repeat the same steps as with the other gas pedal



12.

*Choose VIN-Maks. Ajonopeuspot
(Drive potentiometer located
near the left joystick)*



12.1

*Turn the potentiometer to the
leftmost position and regulate
Max so that Actual value % is
100%*



12.2

Turn the potentiometer to the leftmost position and regulate Min so that Actual value % is at least 4%

